





FIRE INSPIRED®
Hearth Products Controls Co


HEARTH PRODUCTS CONTROLS
2225 LYONS RD.
MIAMISBURG, OH 45342
TOLL FREE: 877.585.9800
PHONE: 937.436.9800
www.hpcfire.com

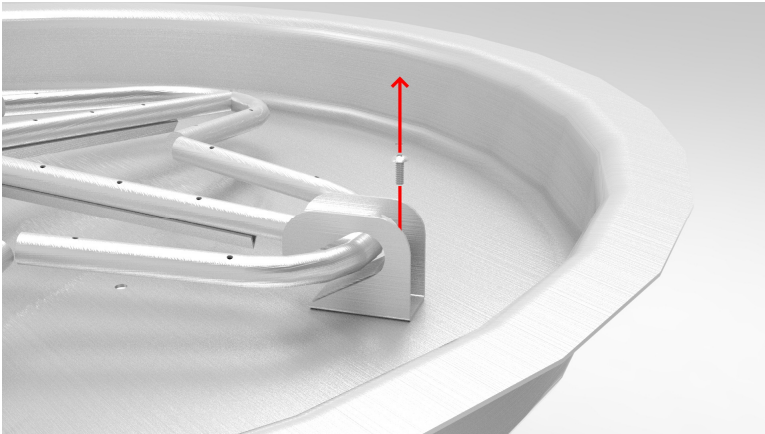

STEP 1:
- LIFT FIRE PIT INSERT FROM ENCLOSURE FOR EASIER ACCESS TO FASTENERS UNDERNEATH PAN
- REMOVE ALL 6-32 SCREWS AND KEPS NUTS FROM ALL BURNER BRACKETS
- SLIDE BURNER BRACKET OUT FROM THE BURNER AND SET ASIDE

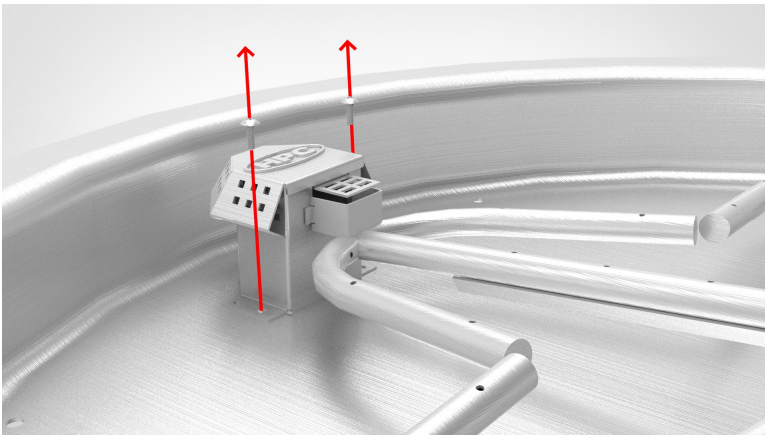


STEP 2:
- REMOVE THE TWO 6-32 SCREWS AND KEPS NUTS FROM THE PILOT SHROUD
- LIFT PILOT SHROUD UP AND AWAY FROM THE BURNER TO GIVE CLEARANCE WHEN REMOVING BURNER

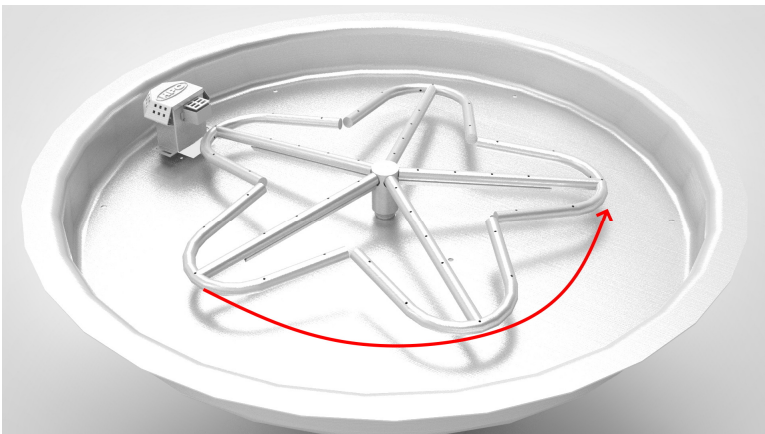

STEP 3:
- ONCE ALL BRACKETS AND PILOT SHROUD IS CLEAR, SPIN THE BURNER COUNTERCLOCKWISE UNTIL THE BURNER IS FULLY REMOVED

STEP 4:
- APPLY OIL LUBRICANT ON THREADS OF BURNER AND PAN
- INSTALL NEW BURNER BY SPINNING IT CLOCKWISE ONTO THE EXISTING PAN (NO THREAD SEALER IS NEEDED TO SEAL OFF THE THREADS)
- REVERSE STEPS TO REASSEMBLE THE PILOT SHROUD AND BURNER BRACKETS USING EXISTING, OR NEW, 6-32 SCREWS AND NUTS

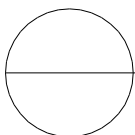

BURNER REMOVAL INSTRUCTIONS